


**Construction Tips:**

- Before you start, remember to debur and clean your pieces if necessary.
- You may pre-polish your piece with a dry #0000 steel wool pad.
- Assemble your pieces with a cool iron. This metal has a melting point of 450°F. A hot iron could result in melting of the product.
- After your glass is attached, piece should be thoroughly cleaned with hot soapy water, flux remover or degreaser.
- Remember to apply any patinas, if desired, immediately after cleaning. Use a toothbrush to get into tight areas.

**Always wear eye protection.**

After your piece is completed, details and highlights can be brought out by lightly buffing with a clean, dry #0000 steel wool pad.

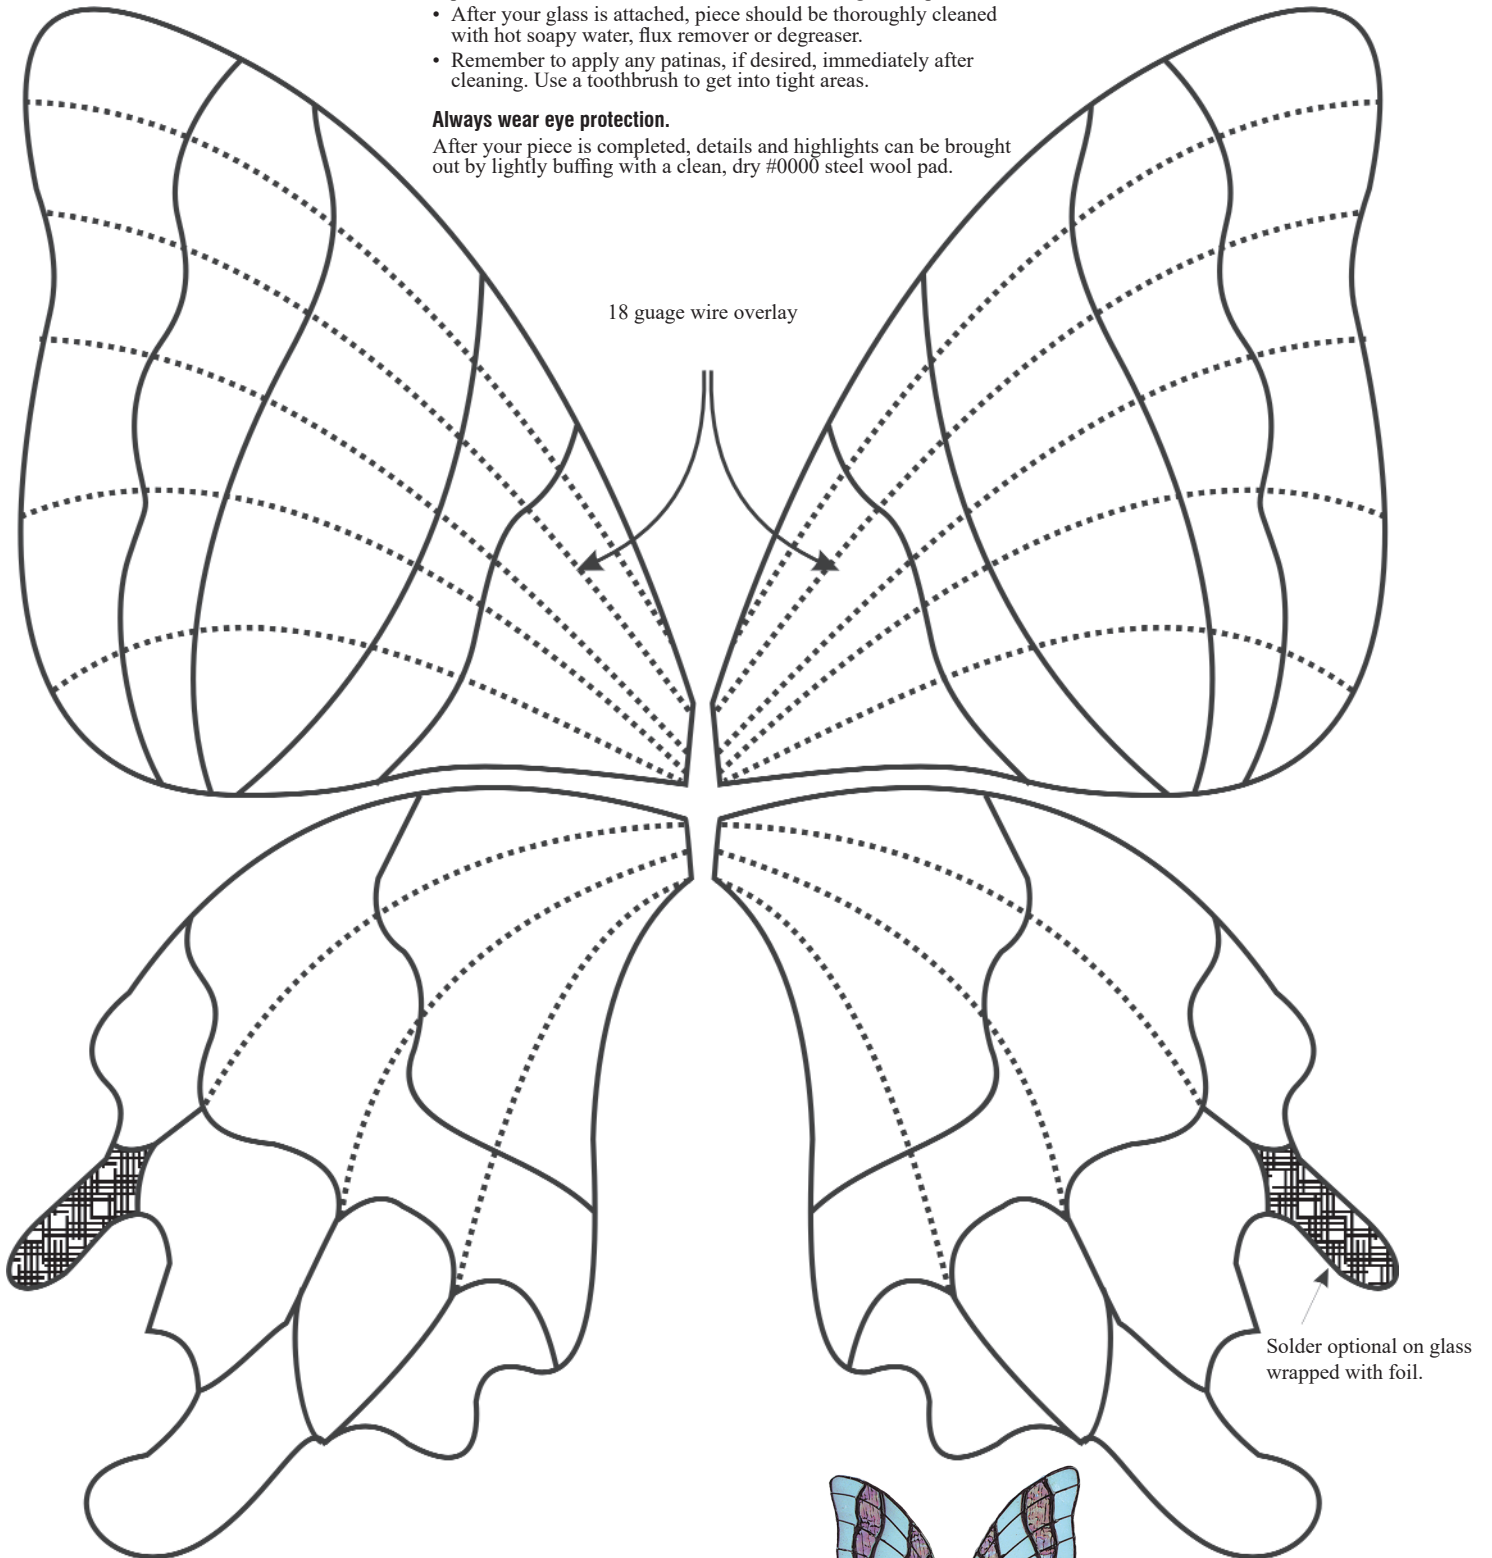

## Butterfly Lady with Scarf

8306-374

©2016 Creative Castings™

